

In the Drawings

Figure 9 Add reference numeral "212" to box CONDITIONAL 5 TO  
32 ADDRESS DECODE;

Add reference numeral "214" to box READ FROM RF  
CORE;

Add reference numeral "216" to box 5 TO 32 ADDRESS  
PREDECODE;

Add reference numeral "218" to box PREDICATION  
PREDECODE;

Add reference numeral "220" to box WRITE KILL;

Add reference numeral "222" to box PREDICATION;

Add reference numeral "224" to box WRITE  
ARBITRATION; and

Add reference numeral "226" to box WRITE TO RF  
CORE.

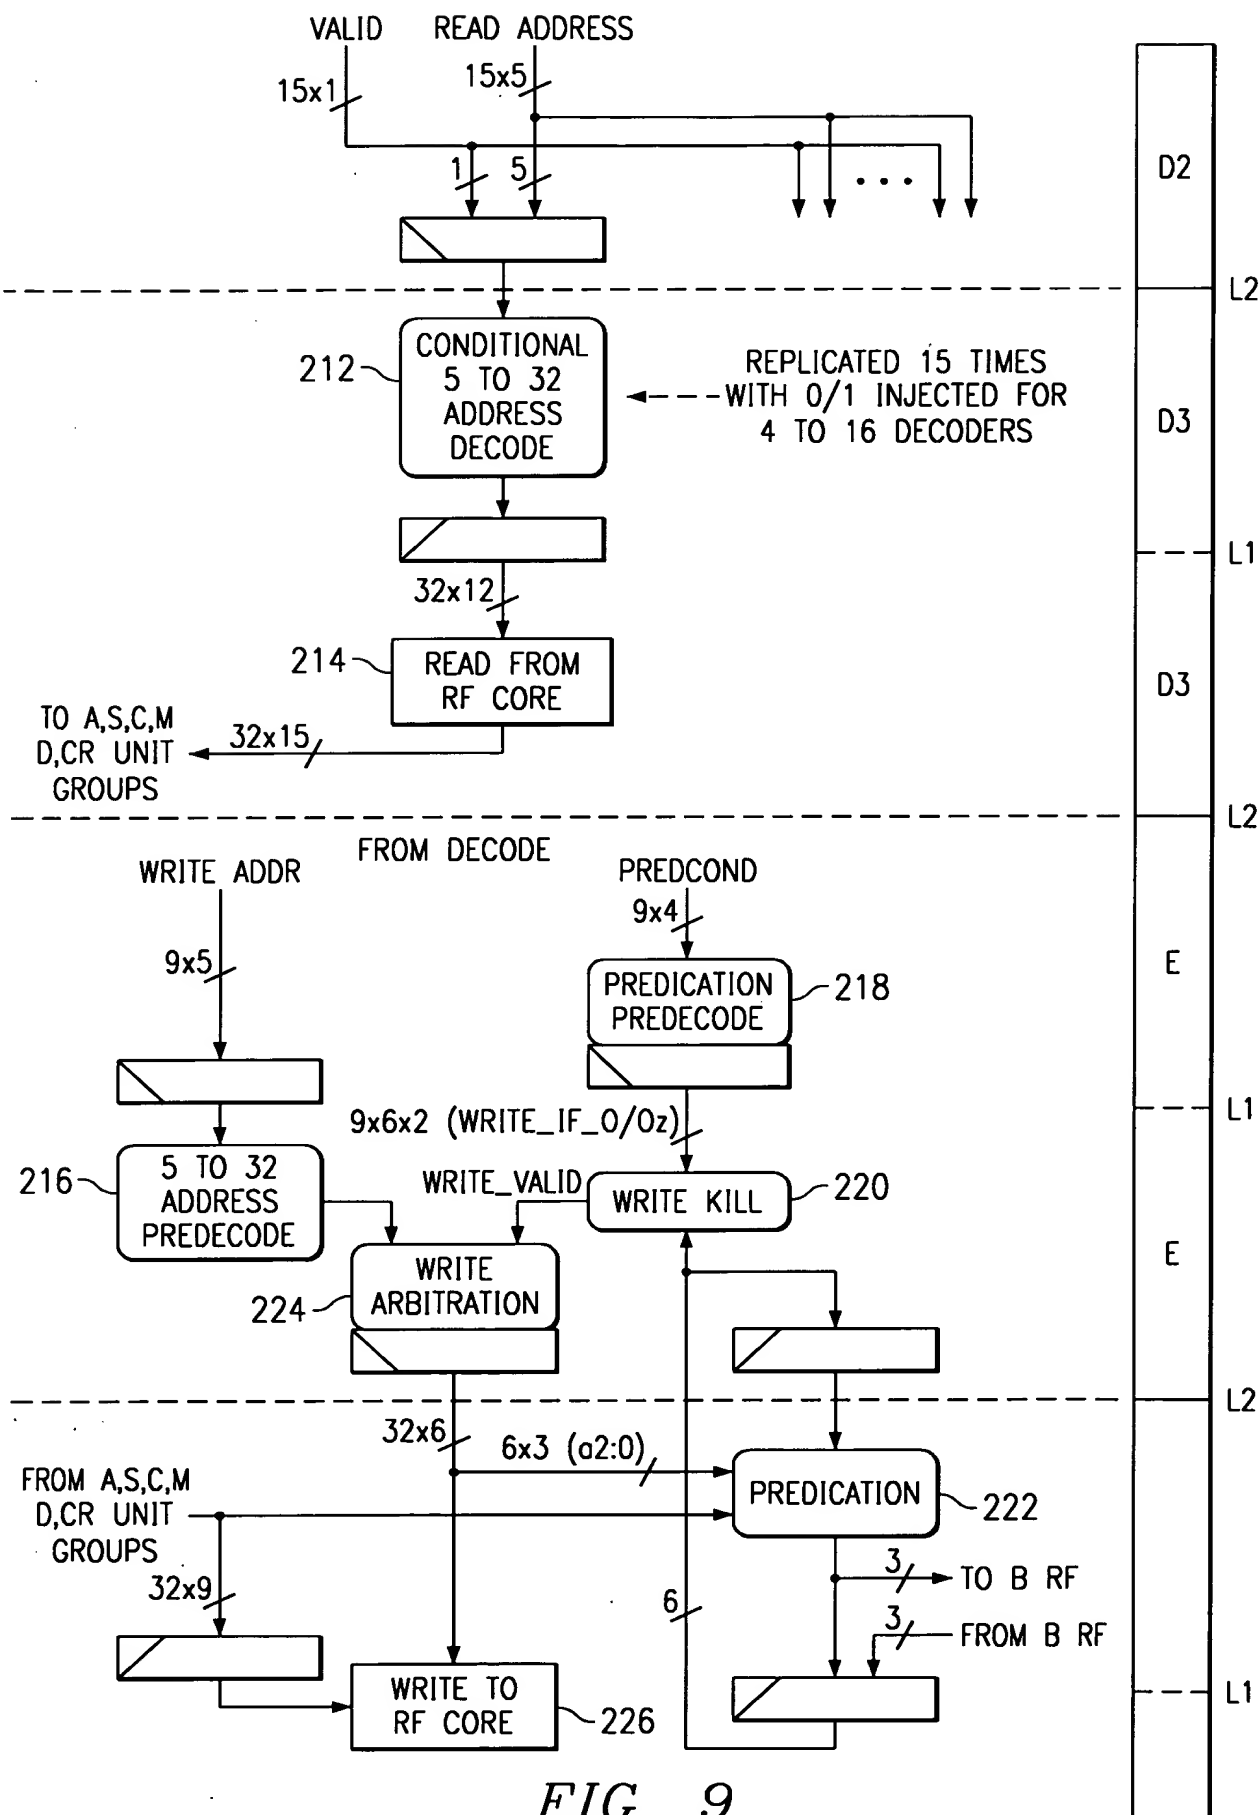


FIG. 9